


VERT




mm - in

470 - 18.5

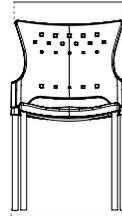

510 - 20

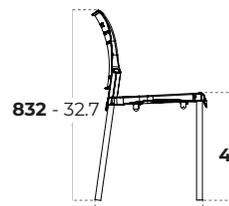

832 - 32.7

450 - 17.7

500 - 19.6



Stackable
(4 units)

The VERT chair is a great option that stands out for its incredible versatility, characterized by its wide range of configurations that adapts to different spaces.

MATERIALS


DESCRIPTION

Back and seat made of high performance glass fiber reinforced polypropylene by gas assisted injection process, with UV additives level 8 for protection against ultraviolet rays and fastness to light.

COLORS

Microtextured surface.

PP POLYPROPYLENE 



**Special colors are also available, upon special request.*

CUSHION

A polyurethane foam injected cushion, upholstered with vinyl or fabric. Full upholstery (backrest and seat) or semi-upholstered (seat) options are available.

**A wide range of upholstery materials are available. Please ask for the entire finish guide.*

VERT



LEGS

Fabricated in 16-gauge tubular C.R steel of 1" (25mm) diameter, with an electrostatic powder coating finish, resistant to +750 hours of salt spray.

CR STEEL



WEIGHT

STANDARD
11 lb / 5Kg

LOAD CAPACITY
300 lb / 136Kg

REGULATIONS AND CERTIFICATIONS

PRODUCT CERTIFICATIONS

Product tested according to ANSI/BIFMA X5.1 Office Chairs:

- Backrest Strength Test (BIFMA x5.1-11-6)
- Drop Test - Dynamic (BIFMA x5.1-11-8)
- Seating Durability Test (BIFMA x5.1-11-11)
- Stability Test (BIFMA x5.1-11-12)
- Backrest Durability Test (BIFMA x5.1-11-16)



COMPANY CERTIFICATIONS

ISO 9001:2015
Quality management system



The reproduction of this document is strictly prohibited without the prior authorization of INORCA SAS.

INORCA SAS

Calle 18 #118-85 Avenida Cañasgordas - 54 Cali, Colombia
Tel: +57 2 4896999 - Toll free from USA: +1 786 209 0299 /
www.inorca.com / info@inorca.com.co

VERT contract